


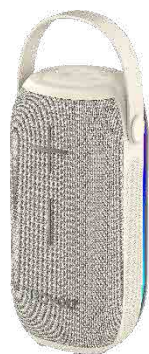

NEO BLAST PARTY TIME BLUETOOTH SPEAKER User Manual



Notice:
Please read user manual carefully and keep it for your records.

Notice for Use:

1. For the first use, please charge the battery first. Do not play music while charging.
2. Please use certified DC 5V cable for charging.
3. When music is played, If the sound is intermittent, It may be lack of power, please charge it firstly.
4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.


Specifications:

- Bluetooth version: v6.0
- Material: ABS
- Rechargeable Battery: 3600mAh
- Function: BT/TF/AUX/USB/LED
- Dimension: 133.5*102.8*263.6mm
- With flame colorful lights

Includes:

- 1*Speaker
- 1*Type C charging cable
- 1*User Manual
- 1*Warranty Card
- 1*Thank you Note

Functional buttons:

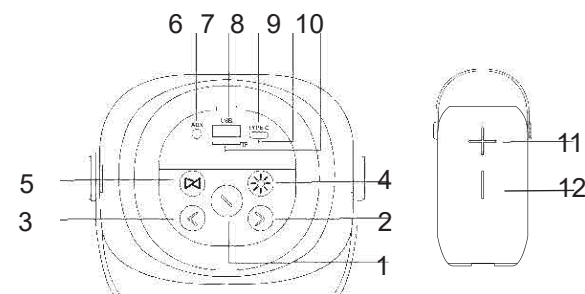

- | | |
|----------------------|---------------------------------|
| 1. ON/OFF/Play/Pause | 7. USB port for USB flash drive |
| 2. Next track | 8. Charging port |
| 3. Previous track | 9. Indicator light |
| 4. Light button | 10. TF card slot |
| 5. Mode button | 11. Volume+ |
| 6. AUX port | /TWS/Reset |
| | 12. Volume- |

ON/OFF/Play/Pause Button:

Long press the ON/OFF button to turn on or turn off the speaker. When you turn on the device, activate the Bluetooth feature on your phone, laptop, or tablet and set to search for Bluetooth device "Neo Blast" and connect. Short press to pause or play music.

Next track:

Short press to change to next track

Previous track:

Short press to change to previous track

Light Mode:

Short press the change to different light.

Mode Button:

Short press to switch among BT, USB Drive, TF Card and Aux-in mode.

Double press for TWS mode.

Triple press to reset the BT connection.

Aux-in Mode:

Plug 3.5mm cable to the AUX hole, and connect the other end of the 3.5mm cable into your music device such as mobile/MP3/PC There will be a voice prompt when the AUX mode connection is successful. Please select the track in your device and adjust the volume by +/- button.

USB Reading/TF Card Reading:

Insert the USB drive/TF Card (not included) into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

Charging:

Connect the small end of the Type-C charging cable (included) to the Type-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

Volume+:

Short press to change to increase the volume

Volume-:

Short press to change to decrease the volume