



NEO GROOVE BLUETOOTH SPEAKER

User Manual



Notice:

Please read user manual carefully and keep it for your records.

Notice for Use:

1. For the first use, please charge the battery first. Do not play music while charging.
2. Please use certified DC 5V cable for charging.
3. When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.

Specifications:

- Material: ABS + Metal mesh
- Bluetooth version: V5.4
- Rechargeable battery: 1800mAh
- Function: BT/FM/TF/USB
- Charging port: Type-C
- Product size: 164x92x97mm


Includes:

- 1*Speaker
- 1*Type C charging cable
- 1*User Manual
- 1*Warranty Card
- 1*Thank you Note

Pairing:

When turn on the speaker, a sound will indicate "Bluetooth Mode". Activate the Bluetooth feature on your source device and set it to search. Wait for your new speaker "Neo Groove" to appear, then select to pair and connect.

Functional buttons:

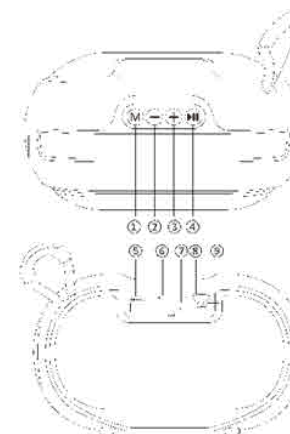

1. Mode button/TWS
2. Volume down/Previous track
3. Volume up/Next track
4. Play/Pause/Reset
5. ON/OFF switch
6. TF card slot
7. USB slot
8. Charging port
9. Charging indicator LED

1. Mode button

Short press the button to change to different mode.
Double press the button to connect the TWS.

2. Volume down/Previous track

Long press to change to previous music.
Short press to decrease the volume.

3. Volume up/Next track

Long press to change to next music.
Short press to increase the volume.

4. Play/Pause/Reset

Short press the button to play or pause the music.
Long press the button for 5 seconds to reset.

5. ON/OFF switch

Slide the on/off button to turn on or turn off the speaker.

6. TF card slot & USB slot

Insert the Micro SD card or USB drive into the slot. Music will play automatically when there are MP3 files stored.
Press the "+" and "-" buttons for volume control. Also long press the same buttons for track selection.
MicroSD: Max. memory of 32GB
USB drive: Max. memory of 32GB

8 Charging port & Charging indicator

Connect the small end of the charging cable (included) to the charging port located on the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

FM mode:

In FM mode, long press the play/pause button to complete a frequency auto search, the speaker will save the channels which searched automatically. Then Long press the + and - button to choose the channels and short press the + and + buttons to adjust the volume.
Please insert the charging cable to enhance the FM signal.

TWS mode:

Pease note: To use this function, you will need 2pcs speaker of Neo Groove.
Turn on both speakers and search for the speaker on your device. You will see two "Neo Groove" speakers.
Pick one of the two speakers and double press the Mode button. You will now only see one "Neo Groove" on your device list. Select it. Your speakers now in TWS mode.
Double press the "mode" button to disconnect TWS mode.