



NEO VIBE PARTY TIME BLUETOOTH SPEAKER

User Manual



Notice:
Please read user manual carefully and keep it for your records.

Notice for Use:

1. For the first use, please charge the battery first.
Do not play music while charging.
2. Please use certified DC 5V cable for charging
3. When music is played, If the sound is intermittent, It may be lack of power, please charge it firstly.
4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device


Specifications:

- Bluetooth version: v5.4
- Material: ABS+Metal mesh
- Rechargeable Battery: 1800mAh
- Function: BT/FM/TF/USB/AUX/RGB
- Dimension: 170x120x145mm

Includes:

- 1*Speaker
- 1*Type C charging cable
- 1*User Manual
- 1*Warranty Card
- 1*Thank you Note

Functional buttons:

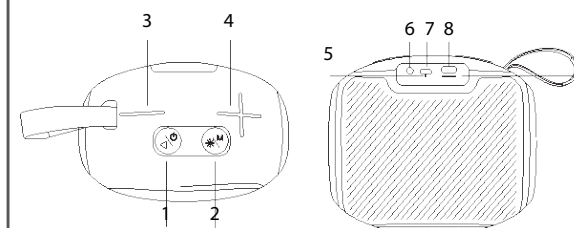

1. ON/OFF/Play/Pause
2. .Mode button/Light button /TWS/Reset.
3. Previous track/Volume-
4. Next track/Volume+
5. .Indicator light
6. AUX port
7. Charging port
8. USB port
9. TF card slot

ON/OFF/Play/Pause Button:

Long press the ON/OFF button to turn on or turn off the speaker. When you turn on the device, activate the Bluetooth feature on your phone, laptop, or tablet and set to search for Bluetooth device "Neo Vibe" and connect it. Short press to pause or play music.

Mode Button/Light Mode/Reset/TWS

Short press the change to different light;
Long press to switch amount BT, TF, USB, FM and AUX in mode.
Double press for TWS mode.
Triple press to reset the BT connection

Previous track/Volume-:

Short press to decrease the volume
Long press to change to previous track

Next track/Volume+:

Short press to increase the volume
Long press to change to next track

Mode Button/Light Mode/Reset/TWS

Short press the change to different light;
Long press to switch amount BT, TF, USB, FM and AUX in mode.
Double press for TWS mode.
Triple press to reset the BT connection

TWS Mode

Note: Two Neo Vibe speakers are required to use the TWS function.
The TWS function is not compatible with FM mode, TF card mode, or Auxiliary mode.
Turn on both speakers.
Disconnect the speakers from all Bluetooth devices.
Place the speakers close together.
Press the Mode/Light button twice on either speaker. An alert sound will play once pairing is successful.
Press the Mode/Light button twice again to disconnect TWS.

FM Mode:

Note: The auxiliary cable acts as an antenna (not included). Connect the auxiliary cable before switching to FM mode.
To switch to FM mode, long-press the M button.
Auto scan: Press the Play/Pause button twice.
Increase volume: Press the Volume + button.
Decrease volume: Press the Volume - button
Next Track: Hold the Volume + button (Next Track)
Previous Track: Hold the Volume - button (Previous Track)
Mute/Unmute: Press the Play/Pause button.

Aux-in Mode:

Plug 3.5mm cable to the AUX hole, and connect the other end of the 3.5mm cable into your music device such as mobile/MP3/PC. There will be a voice prompt when the mode connection is successful. Please select the track in your device and adjust the volume by +/- button.

USB Reading/TF Card Reading:

Insert the USB drive/TF card (not included) into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

Charging:

Connect the small end of the Type-C charging cable (included) to the Type-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor (not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.